

Ergo-FloorTM

Canine Club

USE & CARE INSTRUCTIONS

- Do not soak the mat in water. Use a damp mop or towel to clean the surface of the mat. Use only NON-ABRASIVE natural cleaners or warm water with a mild PH neutral soap
- Commercial grade brooms are permitted to clean up any debris on the mat
- Do not let spills or accidents sit on the mat for an extended period. Clean them up immediately using approved cleaning methods listed above
- It is not recommended to use rotary scrubbers, industrial-grade vacuums or any other mechanical cleaners or scrubbers to clean the mat. They have a possibility of causing damage to the mat
- Allow mat to dry completely before returning to normal use
- It is recommended to pull matting up once a month and sweep under the mat. A buildup of debris and foreign objects could cause rips and tears in the mat that you may not see
- Having a proper cleaning schedule can extend the longevity of your new mat. Frequency of cleaning schedule will vary based on usage

